




Uncontrolled Document  
For Guidance Only  
**SERVICE SHEET**  
**Number 6**

## TO CHANGE THE CHARGER SOCKET

(PART No. PORPR 1717 )

1. Remove the 5 Phillips screws from the rear case of the *Power Pack*.
2. Remove the battery.
3. Cut the wires attached to the charger socket and remove the socket.
4. Thread the wires through the socket-retaining nut and then pass the wires through the hole in the front case.
5. Strip the wire ends and insert them in the appropriate terminals of the new socket and solder them in place. (*Fig.1*).

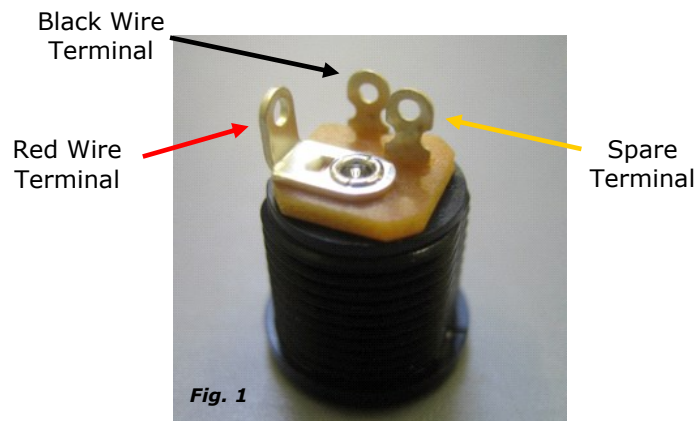

6. Re-insert the charger socket into the casing and tighten up the retaining nut.
7. Replace the battery and re-assemble the case.

For Further Help & Assistance Contact  
The Portable Power (UK) Service Department  
Portable Power Ltd (UK)  
+44 [0] 1423 861616  
[Service@portablepowerltd.com](mailto:Service@portablepowerltd.com)