


## Changing The Test Switch



### Replacing the Test Switch on the Front Panel

1. Remove the 5 Philips screws from the rear of the *Power Pack* case.
2. Remove the battery.

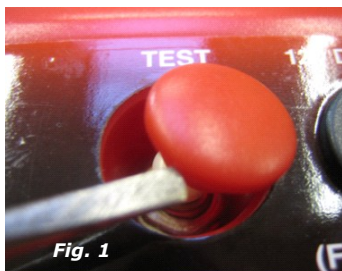

3. Turn the case over and remove the red plastic button - this is best done by inserting a thin bladed screwdriver behind the button and levering it off (Fig.1).

4. Unscrew the metal retaining nut, and withdraw the switch (Fig. 2)

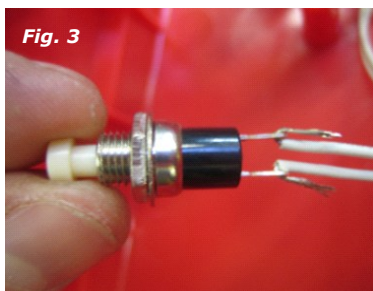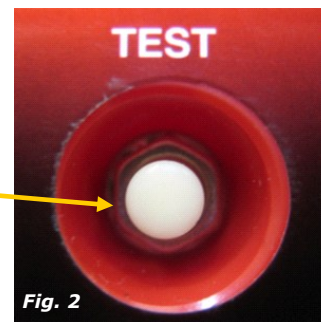

5. Cut the wires attached to the switch (Fig 3.)
6. Insert and re-solder the wires into the terminals of the new switch.
7. Replace the new switch into the case and tighten the retaining nut.

8. Place a small amount of glue into the recess on the back of the button to help retain it on the switch (Fig. 4).

9. Replace the battery and reassemble the *Pack*.

